

## Camera Anti-Twist Plates

### A Stroboframe Exclusive!

Cameras mounted to flash brackets of any brand, including ours, tend to twist or rotate on the camera mounting screw. Cork or rubber friction pads help, but the real solution is to use a camera-specific Anti-Twist (AT) Plate. These plates act as an interface between the camera and bracket. They pin-register to the bracket and conform to the camera's baseplate. This locks the camera to the bracket to prevent twisting.

Anti-Twist Plates are sold separately because there are so many camera configurations. We manufacture different AT Plates to fit virtually any camera. Also, because our Anti-Twist Plates are interchangeable, your bracket will never become obsolete should you buy different equipment!

*Note: When using Pro-T or Press-T model brackets with heavier flash units, we consider the use of a Camera Anti-Twist Plate mandatory.*



Camera	Anti-Twist Plate Catalog Number
35mm SLR Cameras (unless listed below)	300-SLR
Bronica ETR	300-ETR
Bronica ETR with speed grip	300-ETR
Bronica ETR with motor (on Pro-RL only)	Cork-Pad*
Bronica SQA	300-SQA
Bronica SQA with speed grip (on Pro-SQ only)	Cork-Pad*
Bronica SQA with motor (on Pro-SQ only)	Cork-Pad*
Bronica GS1	300-GS1
Bronica GS1 with speed grip	300-ETR
Canon EOS-1, -IN with BP-E1 or E1	300-BE1
Canon EOS-1, -IN	300-EOS
Canon A2, Elan	300-H35
Canon A2, A2E with VG10 vertical grip	300-VG1
Canon Elan II with BP-50	300-BP5
Hasselblad	300-HAS
Mamiya (all except 6, 6MF and 7**)	300-MAM
Nikon F5	300-NF5
Nikon F4 with MB21 battery pack	300-NF4
Nikon F4 with MB20 battery pack	300-H35
Nikon N90, N90s	300-H35
Nikon 90s with MB-10 vertical grip	300-BE1
Pentax 645	300-PTX
Pentax 6 x 7 (for use with Pro-T only)	300-PTX

\* Anti-Twist Plate not needed; cork pad (supplied with all Stroboframe brackets) provides adequate anti-twist prevention.

\*\* For Mamiya 6, 6MF and 7 models, use Pro-T/m bracket, which has a built-in anti-twist feature.



Flash Anti-Twist Plates	Catalog Number
-------------------------	----------------

*Mount between flash and flash arm to prevent flash from twisting.*

Nikon SC-17 camera cord***	300-C17
Quantum Q-Flash	300-QFL
Lumedyne flash heads	300-LUM

\*\*\* To maintain complete TTL flash function when using Nikon SB-series flash units on our brackets, you must use a Nikon SC-17 cord with this plate, which prevents the SC-17 from twisting. Twisting can cause the flash and lens to be misaligned.